



**CONNECTS TO OPTIONAL
LASER DEFUSER EX
(OTHERWISE DO NOT USE)**

IGNITION AND GROUND

1. Use a test meter to locate an ignition on source for the Interior Network Module with +12 volts when ignition key is both on and cranking.
2. Connect the black wire to a solid chassis ground using the provided ring terminal and silver self-tapping screw

**FULL INSTALLATION INSTRUCTIONS
AVAILABLE AT: K40.COM**

**K40 DAYTIME TECHNICAL SUPPORT
800-323-5608**

**24 HR. TECHNICAL SUPPORT
800-784-9144**