

# K40 RL360i/RL200i OUICK REFERENCE GUIDE

## **Customizable Settings**

To access and change any of the factory default settings:

- **Press and release** MENU . The RL360i/RL200i will announce "Menu" along with the status of the first customizable setting.
- **Press and release** MENU to scroll through the options until you get to the feature you want to change.
- Press and release or to change an existing setting.

The system with automatically save settings and exit after 10 seconds.

| Menu Options<br>(in order presented) |                          | Factory Default Setting |
|--------------------------------------|--------------------------|-------------------------|
| 1                                    | Voice Type               | Female                  |
| 2                                    | Audible Voice            | On                      |
| 3                                    | Wake Up                  | Wake Up Long            |
| 4                                    | Auto Mute                | Off                     |
| 5                                    | POP Radar                | Off                     |
| 6                                    | Front Radar              | On                      |
| 7                                    | Front X-Band             | On                      |
| 8                                    | Front K-Band             | On                      |
| 9                                    | Front Ka-Band            | On                      |
| 10                                   | Rear Radar               | On*                     |
| 11                                   | Rear X-Band              | On*                     |
| 12                                   | Rear K-Band              | On*                     |
| 13                                   | Rear Ka-Band             | On*                     |
| 14                                   | Laser Defuser (optional) | On                      |
| 15                                   | Laser Setting            | Laser Constant Transmit |
| 16                                   | Factory Reset            |                         |



## **Frequently Used Features**

#### Mute Audio Before or During Alert (Owners Manual pg. 8)

| <b>30-second Mute</b> or duration of alert | Press and release (MUTE).          |
|--|------------------------------------|
| Extended Mute<br>(5 minutes)               | Press and hold MUTE for 3 seconds. |

#### Mark to Alert (Owners Manual pg. 9)

| Mark Location to<br>Alert      | <b>Press and release</b> (MA) when you are at a location you wish to store in your database. |
|--------------------------------|--|
| Remove a Marked<br>Location    | <b>Press and release</b> MA while at that location.  |
| Remove All<br>Stored Locations | <b>Press and hold</b> MA for 10 seconds at any time.   |

### Activating/Adjusting Quiet Ride (Owners Manual pg. 8)

- **Press and release** QUIET on the remote control to activate the Quiet Ride menu. The speaker will announce the current setting of Quiet Ride.
- Use Any selected speed setting indicates Quiet Ride.
- When you have made your speed selections, stop scrolling and Quiet Ride will announce, "Quiet Ride Set".

### Activating/Adjusting Speed Monitor (Owners Manual pg. 10)

- **Press and release** (sm) on the remote control to activate the Speed Monitor menu.
- Use / or to adjust the Speed Monitor speed setting. Any selected speed setting indicates Speed Monitor is on.