



IGNITION AND GROUND

1. Use a test meter to locate a +12v ignition switch source for the Host.
2. Connect the black wire to a **solid chassis ground** (K40 recommends the driver's side kick panel) using the **provided ring terminal** and silver self-tapping screw.

RED WIRE REQUIRES +12 IGNITION SWITCHED POWER WITH 1 AMP FUSE IF NOT CONNECTED TO RADAR SYSTEM +12 IGNITION CONNECTION.

FRONT RADAR RECEIVER (RLF)

RECEIVERS MUST BE INSTALLED HORIZONTALLY. DO NOT OBSTRUCT UNIT FACE WITH METAL, CHROME-PLATED PLASTIC OR CARBON FIBER.

REAR RADAR RECEIVER (RLR)
(RL360i MODEL ONLY)

RECEIVERS MUST BE INSTALLED HORIZONTALLY. DO NOT OBSTRUCT UNIT FACE WITH METAL, CHROME-PLATED PLASTIC OR CARBON FIBER.

K40 DAYTIME TECHNICAL SUPPORT
800-323-6768

24 HR. TECHNICAL SUPPORT
800-784-9144