



LASER DEFUSERPLUS BLOCK DIAGRAM

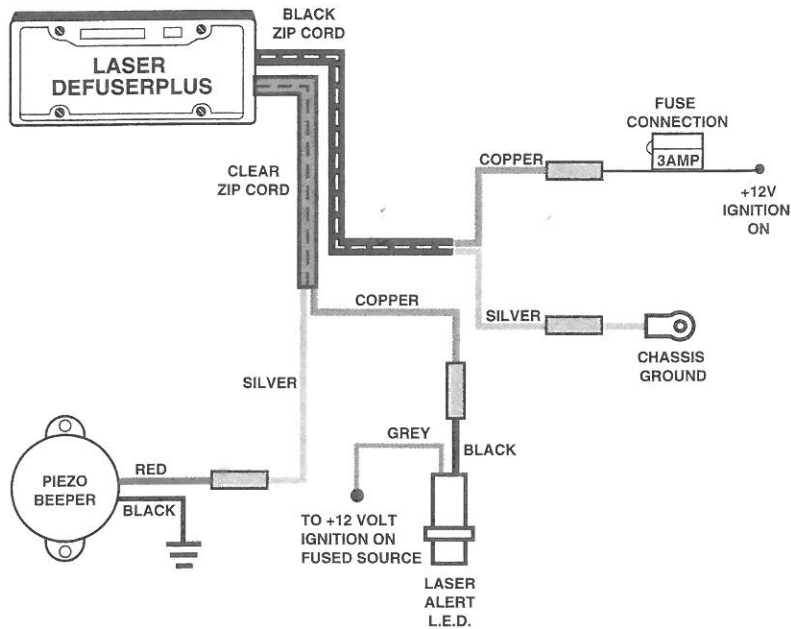

Note: When installing front and rear Laser DefuserPlus units, use a separate 3amp fuse for each Laser Defuser.

LASER DEFUSERPLUS/K40 REMOTE RADAR SYSTEM INTEGRATION DIAGRAM

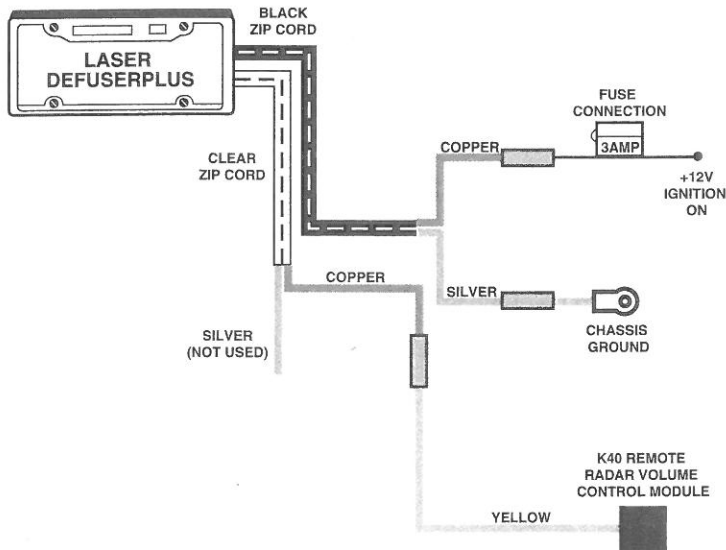

Note: When integrating front and rear Laser DefuserPlus units, both of the clear/copper wires from the two units can be directly connected to the yellow volume control module wire from the K40 remote Radar Detector.